

TYPE	SCALE	DESCRIPTION	PART No.
Diesel tachometer sender	-	Attaches to diesel sender mechanical take-off. Includes coupling and 4 drive keys	60613 S
Oil pressure sender	5 bar 10 bar	Single station, 1/8" NPTF Single station, 1/8" NPTF	60525 OK 60360 NK
Water temperature sender	40 - 120 °C	Single station, 1/8" NPTF	60528 VK
Bushing kit	Temperature and pressure senders	1/8" NPTF - M10x1 1/8" NPTF - M12x1 1/8" NPTF - M16x1.5 1/8" NPTF to 1/4" - 3/8" 1/8" NPTF to 1/2" - 5/8" 1/8" NPTF to 1/8" BSP/F	60618 Z 60619 A 60620 R 60615 U 60616 V 60617 W
Exhaust temperature sender	0 - 800 °C	Stainless steel 316 sender, thread: PT 3/8", supplied with 5 m sleeving cable	22533 MK
Fuel level sender	20 - 60 cm (7.9" - 23.6")	Single station 10 -180 Ω	66180 C
Pitot kits	-	Pitot tube complete with transom mount mounting hardware As above complete with 20' of tubing	60515 OK 60516 PK
Rudder angle sender	-	Sender for single rudder angle indicator	68451 UK



NOTE: SINGLE SENDER: to connect to 1 gauge DOUBLE SENDER: to connect to 2 gauges