

* Do not connect this terminal. The left reset terminal should only be connected on the battery balancer nearest to system ground.

